





# GARED SPORTS MODEL PSCE PEEL & STICK CUSHION EDGE

## MOUNTING INSTRUCTIONS

**NOTE:** The padding in this box is intended for backboards with **ROUNDED** corners.

1. Remove old padding from existing backboard. Scrape surface of backboard frame thoroughly. Use acetone solvent to remove any remaining glue and padding that is adhered to the backboard. The backboard frame must be completely clean for the new padding to stick.
2. Find and mark the center on the bottom of the backboard (equal distance from each corner of the bottom of the backboard).
3. (FIG. A) Remove new padding from box and locate the front side as shown. **DO NOT PEEL STRIPS OFF AT THIS TIME.**
4. (FIG. B) Place padding up against bottom of backboard. Cut away any excess padding from around the rim; backboard mounts, bolts or any other obstacles which would prevent the proper attachment of the padding.
5. (FIG. C) Remove peel strips located on the inside "BOTTOM" of the padding. **DO NOT PEEL STRIP ON THE INSIDE FRONT.**
6. Carefully attach the padding, starting at the center on the bottom of the backboard. Work you way out to the corners and up the side. Make sure the front inside edge of the padding remains tight against the front of the backboard.
7. (FIG. D) After padding is securely positioned, pull the front edge of the padding away from the backboard and remove the remaining peel strip on the inside front of the padding.
8. Apply pressure all around padding towards the board to assure good adhesion of the padding.

Peel Strip On  
Inside Bottom  
Peel Strip On  
Inside Front  
(Do Not Remove Until  
After Padding Is Attached)

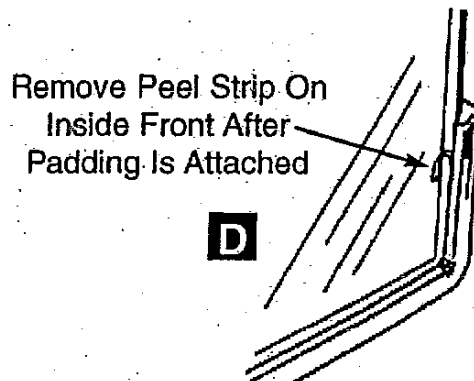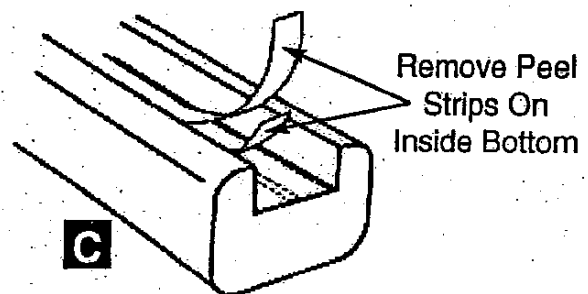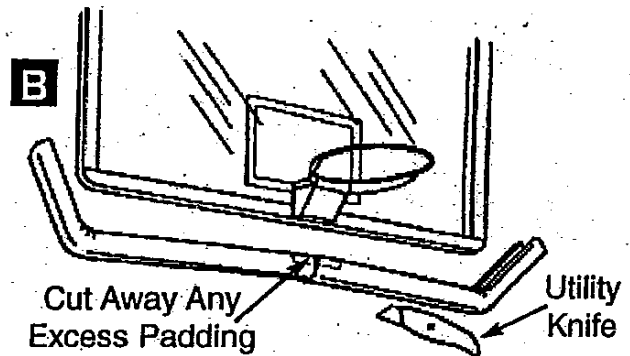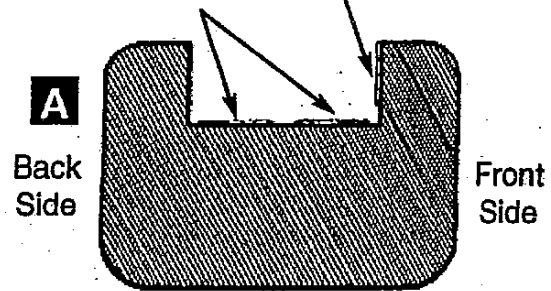

Gared Sports

• St. Louis, MO 63106

(800) 325-2682 • (314) 421-0044 • Fax (314) 421-6014